


# Under-Dash Fuse/Relay Box (2001-2005 1.7L Honda Civic)

[troubleshootmyvehicle.com/honda/1.7L/under-dash-fuse-box](http://troubleshootmyvehicle.com/honda/1.7L/under-dash-fuse-box)

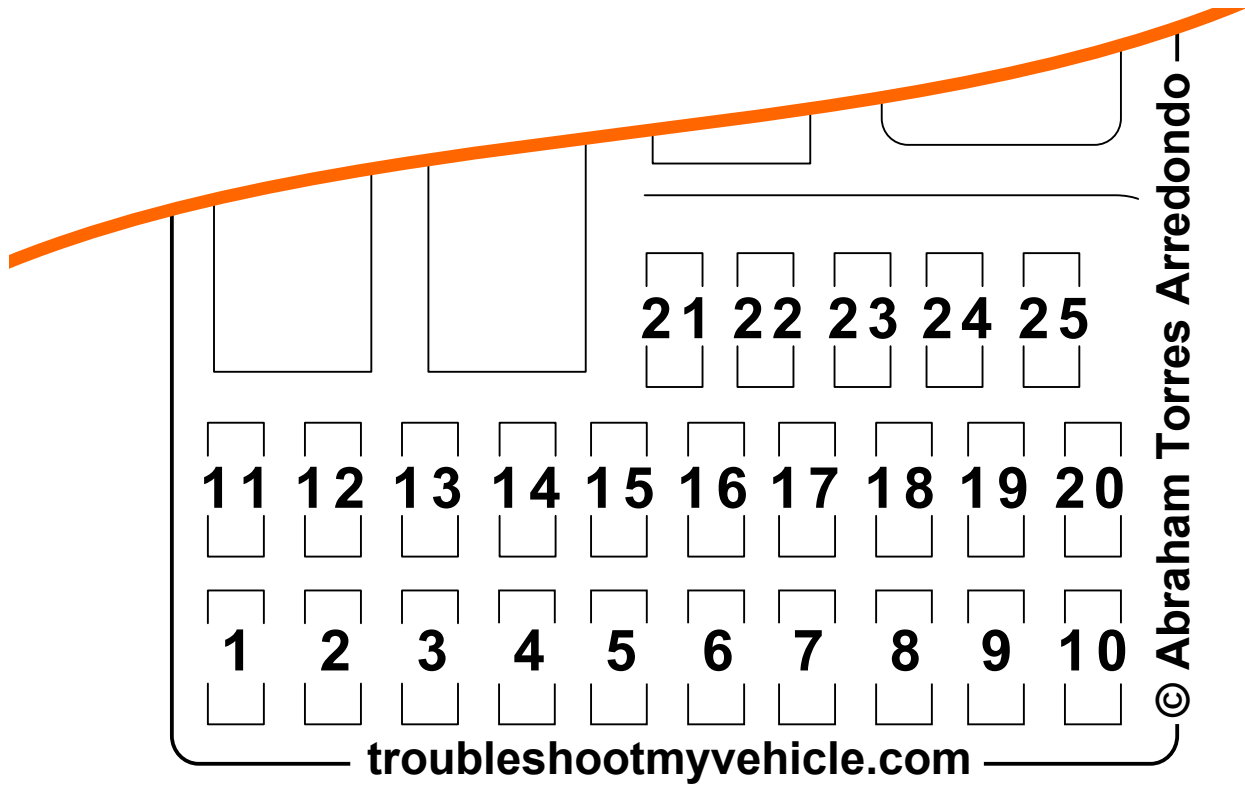

Fuse #	Amps	Fuse Name/Description
1	15 Amps	<ul style="list-style-type: none"> <li>Ignition Coil</li> </ul>
2	20 Amps	<ul style="list-style-type: none"> <li>Air/Fuel Sensor Heater (HX, 2004: DX, LX, EX).</li> </ul>
3	10 Amps	<ul style="list-style-type: none"> <li>Daytime Running Lights (DRL).</li> </ul>
4	10 Amps	<ul style="list-style-type: none"> <li>Alternator</li> <li>A/F Sensor Relay (HX; 2004: DX, EX, LX).</li> <li>Alternator.</li> <li>Cruise Control.</li> <li>ELD Unit.</li> <li>EVAP Bypass Solenoid.</li> <li>EVAP Canister Purge Valve.</li> <li>EVAP Canister Vent Shut Valve.</li> <li>Primary and Secondary Oxygen Sensors.</li> <li>Vehicle Speed Sensor (VSS).</li> </ul>

## Under-Dash Fuse/Relay Box (2001-2005 1.7L Honda Civic)

[troubleshootmyvehicle.com/honda/1.7L/under-dash-fuse-box](http://troubleshootmyvehicle.com/honda/1.7L/under-dash-fuse-box)

Fuse #	Amps	Fuse Name/Description
5	--	<ul style="list-style-type: none"> <li>• <b>NOT USED</b></li> </ul>
6	7.5 Amps	<ul style="list-style-type: none"> <li>• Power Window Relay.</li> </ul>
7	20 Amps	<ul style="list-style-type: none"> <li>• Sunroof.</li> </ul>
8	7.5 Amps	<ul style="list-style-type: none"> <li>• ACC Radio.</li> </ul>
9	10 Amps	<ul style="list-style-type: none"> <li>• Rear Wiper,</li> <li>• Side Supplemental Restrain System (SRS) -HX.</li> </ul>
10	7.5 Amps	<ul style="list-style-type: none"> <li>• Meter.</li> <li>• A/T Reverse Relay.</li> <li>• Back-up Lights.</li> <li>• CarLink Interface Box.</li> <li>• Gauge Assembly.</li> <li>• Keyless Receiver Unit (EX; 2004: DX, LX).</li> <li>• Multiplex Control Unit.</li> <li>• Security Control Unit.</li> <li>• Shift Lock Solenoid.</li> </ul>
11	7.5 Amps	<ul style="list-style-type: none"> <li>• ABS.</li> </ul>
12	7.5 Amps	<ul style="list-style-type: none"> <li>• Daytime Running Lights (DRL) -Canada</li> </ul>
13	10 Amps	<ul style="list-style-type: none"> <li>• Supplemental Restraint System (SRS).</li> </ul>
14	7.5 Amps	<ul style="list-style-type: none"> <li>• R/C Mirror.</li> <li>• A/C Compressor Fan Relay.</li> <li>• A/C Condensor Fan Relay.</li> <li>• Blower Motor Relay.</li> <li>• Heater Control Unit-Panel.</li> <li>• Power Mirror Actuators.</li> <li>• Radiator Fan Relay.</li> <li>• Recirculation Control Motor.</li> <li>• Rear Window Defogger Relay.</li> </ul>
15	--	<ul style="list-style-type: none"> <li>• <b>NOT USED</b></li> </ul>
16	20 Amps	<ul style="list-style-type: none"> <li>• Heated Seat.</li> </ul>
17	15 Amps	<ul style="list-style-type: none"> <li>• Fuel Pump.</li> <li>• PCM (Fuel Injection Computer).</li> <li>• Supplemental Restraint System (SRS) Unit.</li> </ul>

## Under-Dash Fuse/Relay Box (2001-2005 1.7L Honda Civic)

[troubleshootmyvehicle.com/honda/1.7L/under-dash-fuse-box](http://troubleshootmyvehicle.com/honda/1.7L/under-dash-fuse-box)

Fuse #	Amps	Fuse Name/Description
18	15 Amps	<ul style="list-style-type: none"><li>ACC Cigar (Accessory Power Socket).</li></ul>
19	20 Amps	<ul style="list-style-type: none"><li>Turn Lights (Turn Signal/Hazard Relay).</li></ul>
20	20 Amps	<ul style="list-style-type: none"><li>Front Wiper.</li><li>Multiplex Control Unit.</li><li>Windshield Wiper Motor.</li><li>Windshield Washer Motor.</li></ul>
21	–	<ul style="list-style-type: none"><li><b>NOT USED</b></li></ul>
22	20 Amps	<ul style="list-style-type: none"><li>Power Window Front Right (Passenger Side).</li></ul>
23	20 Amps	<ul style="list-style-type: none"><li>Power Window Left Right (Driver Side).</li></ul>
24	20 Amps	<ul style="list-style-type: none"><li>Power Window Left Rear (Rear Driver Side).</li></ul>
25	20 Amps	<ul style="list-style-type: none"><li>Power Window Right Rear (Rear Passenger Side).</li></ul>

From the DIY depot:  
[troubleshootmyvehicle.com](http://troubleshootmyvehicle.com)