


# Under-Hood Fuse/Relay Box (2005 1.7L Honda Civic)

[troubleshootmyvehicle.com/honda/1.7L/civic-under-hood-fuse-box](http://troubleshootmyvehicle.com/honda/1.7L/civic-under-hood-fuse-box)

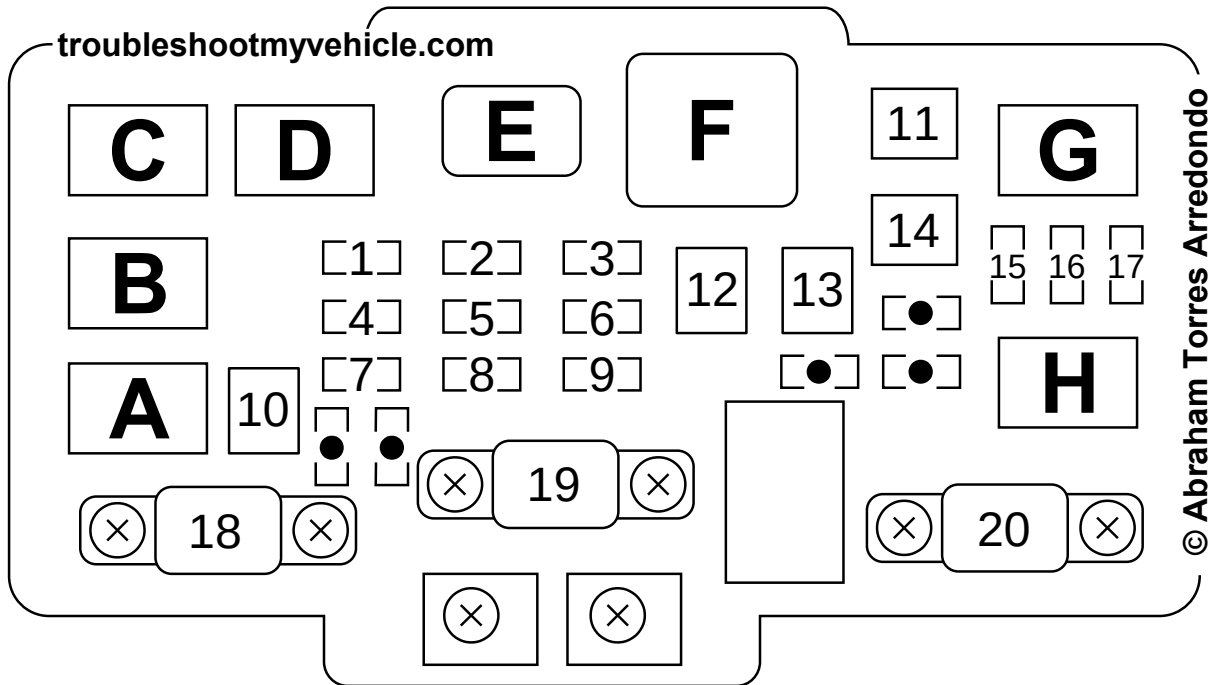

Fuse #	Amps	Fuse Name/Description
1	20 Amps	<ul style="list-style-type: none"> <li>• Condenser Fan.</li> <li>• A/C Compressor Clutch.</li> </ul>
2	15 Amps	<ul style="list-style-type: none"> <li>• Taillight Relay.</li> </ul>
3	7.5 Amps	<ul style="list-style-type: none"> <li>• Ceiling Light.</li> <li>• Ignition Key Light.</li> <li>• Spotlights.</li> <li>• Trunk Light</li> </ul>
4	20 Amps	<ul style="list-style-type: none"> <li>• Radiator Fan Motor.</li> </ul>
5	10 Amps	<ul style="list-style-type: none"> <li>• Turn Signal/Hazard Relay</li> <li>• Turn Signal Lights</li> </ul>
6	15 Amps	<ul style="list-style-type: none"> <li>• Crankshaft Position (CKP) Sensor.</li> </ul>

## Under-Hood Fuse/Relay Box (2005 1.7L Honda Civic)

[troubleshootmyvehicle.com/honda/1.7L/civic-under-hood-fuse-box](http://troubleshootmyvehicle.com/honda/1.7L/civic-under-hood-fuse-box)

Fuse #	Amps	Fuse Name/Description
		<ul style="list-style-type: none"> <li>• ECM/PCM (Fuel Injection Computer).</li> <li>• Injectors.</li> <li>• IAC Valve.</li> <li>• Immobilizer Control Unit.</li> <li>• PGM-FI Main Relay 1 and 2.</li> <li>• Top Dead Center (TDC) Sensor</li> </ul>
7	15 Amps	<ul style="list-style-type: none"> <li>• Horn.</li> <li>• Brake Lights.</li> <li>• Brake Signals.</li> </ul>
8	20 Amps	<ul style="list-style-type: none"> <li>• ABS Modulator Unit</li> </ul>
9	10 Amps	<ul style="list-style-type: none"> <li>• Audio Unit.</li> <li>• Data Link Connector.</li> <li>• Gauge Assembly.</li> <li>• Immobilizer Control Unit/Receiver.</li> <li>• Immobilizer Indicator Light.</li> <li>• Keyless Receiver Unit.</li> <li>• Multiplex Control Unit.</li> <li>• Security Control Unit.</li> <li>• Audio Unit</li> </ul>
10	40 Amps	<ul style="list-style-type: none"> <li>• ABS Modulator-Control Unit</li> </ul>
11	40 Amps	<ul style="list-style-type: none"> <li>• Rear Window Defogger (Coupe)</li> </ul>
11	40 Amps	<ul style="list-style-type: none"> <li>• Rear Window Defogger (Sedan)</li> </ul>
12	40 Amps	<ul style="list-style-type: none"> <li>• Blower Motor</li> </ul>
13	40 Amps	<ul style="list-style-type: none"> <li>• No. 7 Fuse (Under-Dash Fuse Box).</li> <li>• No. 23 Fuse (Under-Dash Fuse Box)</li> </ul>
14	40 Amps	<ul style="list-style-type: none"> <li>• No. 2 Fuse (Under-Dash Fuse Box)</li> <li>• No. 3 Fuse (Under-Dash Fuse Box)</li> <li>• No. 5 Fuse (Under-Dash Fuse Box)</li> <li>• No. 15 Fuse (Under-Dash Fuse Box)</li> <li>• No. 16 Fuse (Under-Dash Fuse Box)</li> </ul>
15	20 Amps	<ul style="list-style-type: none"> <li>• Daytime Running Lights Control Unit (Canada).</li> <li>• DRL Relay.</li> <li>• High Beam Indicator Light.</li> <li>• Left Headlight.</li> </ul>

## Under-Hood Fuse/Relay Box (2005 1.7L Honda Civic)

[troubleshootmyvehicle.com/honda/1.7L/civic-under-hood-fuse-box](http://troubleshootmyvehicle.com/honda/1.7L/civic-under-hood-fuse-box)

Fuse #	Amps	Fuse Name/Description
		<ul style="list-style-type: none"> <li>Multiplex Control Unit.</li> </ul>
16	20 Amps	<ul style="list-style-type: none"> <li>Multiplex Control Unit (Door Locks).</li> </ul>
17	20 Amps	<ul style="list-style-type: none"> <li>Daytime Running Lights Control Unit (Canada).</li> <li>Right Headlight.</li> <li>Multiplex Control Unit.</li> <li>High Beam Indicator.</li> </ul>
18	-	<b>NOT USED</b>
19	80 Amps	<ul style="list-style-type: none"> <li>Battery.</li> <li>Power Distribution.</li> </ul>
20	40 Amps	<ul style="list-style-type: none"> <li>Ignition Switch (BAT)</li> </ul>

Letter	Relay Name
A	Condenser Fan Motor Relay
B	Horn Relay
C	Radiator Fan Motor Relay
D	A/C Compressor Relay
E	Rear Window Defogger Relay
F	Blower Motor Relay
G	Empty
H	Headlight Relay